

The following tools will be needed:



2. Place one bracket with the rear edge touching the cloth on the back of the panel. Align the top of the bracket (wide slot faces the bottom of the panel).




1. Using your tape measure, make a mark 18" down from the top of the panel. Repeat for the other side



3. Attach bracket to the panel using the 2 supplied screws. Repeat for other bracket.



4. Set your boom stand so that the boom is horizontal.

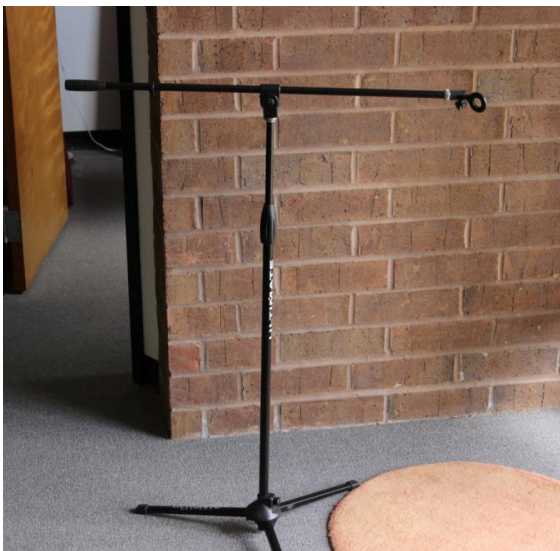

5. Hang the panel over the boom.

