





LINE THIS EDGE TO BOTTOM



Use pen to puncture guides to mark the fabric where you will drill pilot holes.




ALIGN THIS EDGE WITH BACK OF PANEL


LEFT SIDE



LINE THIS EDGE TO BOTTOM

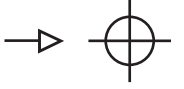

Use pen to puncture guides to mark the fabric where you will drill pilot holes.

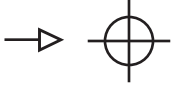


ALIGN THIS EDGE WITH BACK OF PANEL

RIGHT SIDE




ALIGN THIS EDGE WITH BACK OF PANEL

RIGHT SIDE

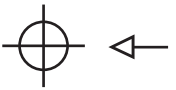

Use pen to puncture guides to mark the fabric where you will drill pilot holes.

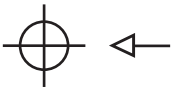


LINE THIS EDGE TO BOTTOM




LEFT SIDE

ALIGN THIS EDGE WITH BACK OF PANEL

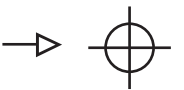

Use pen to puncture guides to mark the fabric where you will drill pilot holes.

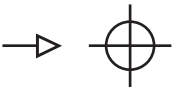

LINE THIS EDGE TO BOTTOM



Set the panel on its side to allow for the best downward force. Align this sheet according to the template, use a pen or sharp object to puncture and mark the pre-drill guides onto the fabric.


Ensure your pre-drill hole guides are visible. Use a thicker marker if needed.

Use a 7/64" bit to pre-drill screw-holes which should be in the strongest part of the frame.

Using the screws, fasten the feet to the sides of the panel in the correct orientation. See above for the finished product.




STEP 1

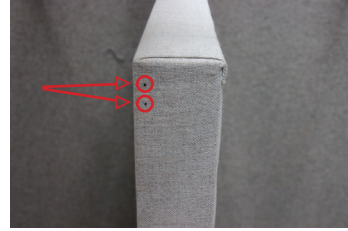


STEP 2



STEP 3

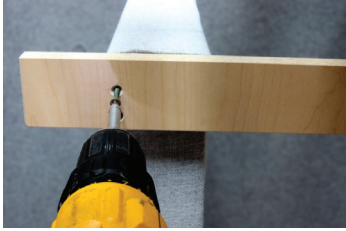

STEP 4

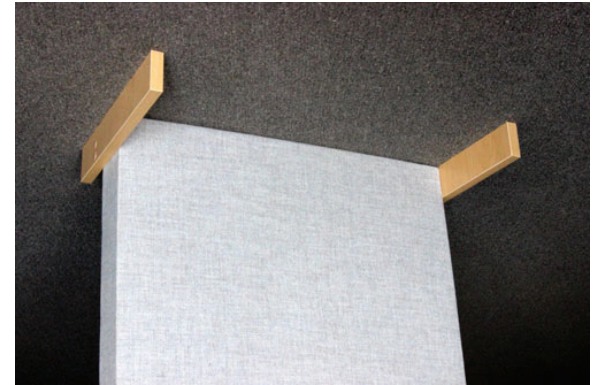

- 4 FastCap covers
 - 4 screws
 - 1 left foot and 1 right foot
- This kit includes:

Convert your 242 Acoustic Panels, 244 Bass Traps, Monster Bass Traps, Spot Panels, Acoustic Art Panels, Alpha Series panels, and Impression Series panels into portable gobos. The feet are designed to steady the panel while upright and to allow you to place the panel close to a wall.


Panel Foot Kit




Panel Foot Kit

Convert your 242 Acoustic Panels, 244 Bass Traps, Monster Bass Traps, Spot Panels, Acoustic Art Panels, Alpha Series panels, and Impression Series panels into portable gobos. The feet are designed to steady the panel while upright and to allow you to place the panel close to a wall.

- This kit includes:
- 1 left foot and 1 right foot
 - 4 screws
 - 4 FastCap covers

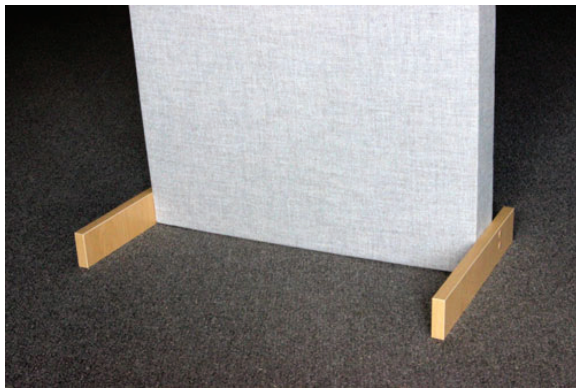


STEP 4

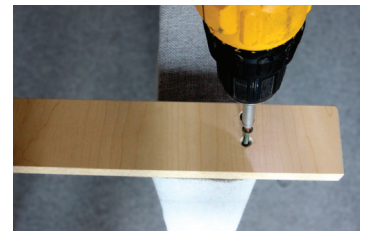

STEP 3



STEP 2

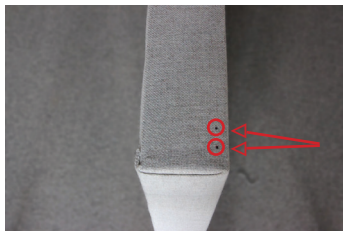

STEP 1



Set the panel on its side. Align this sheet according to the template on the back, and use a pen to puncture and mark the pre-drill guide targets onto the fabric.

Ensure your pre-drill hole guides are visible. Use a thicker marker if needed.

Use a 7/64" bit to pre-drill screw-holes.

Using the screws, fasten the feet to the sides of the panel in the correct orientation (front will be the longer side). See above for the finished product.